

Bosch 3000

LCD ICON USER GUIDE - DEFAULT USER CODE: 2580

Step 1:

Unscrew Alarm Panel LID & Plug in the battery.

Red Plug to Red Terminal, Black Plug to Black Terminal (refer picture Below).



Close alarm panel, ensure power point is turned on and proceed to follow steps below on your keypad

Time & Date:

Programming the date and time is only required when you need functions such as automatic test reports, automatic arming, and history events to operate correctly.

How to Program the Date and Time

1. Enter your Master Code, followed by [6] and the [#] key (for example, [25806#]). Three beeps sound, and the STAY and AWAY indicators flash.
2. Enter the day, month, year, hour, and minute (DD, MM, YY, HH, MM format) (for example, DD = day of the month, MM = month of the year, YY = current year, HH = hour of the day, MM = minute of the day). To program the hour of the day, use the 24:00 hour format.

Adding/Changing User Codes:

Only the Master Code holder can add or change other system user codes, including the Master Code. Up to 32 user codes can be programmed to operate the system.

How to Add a User Code

1. Enter your Master Code, followed by [1] and the [#] button (for example, [25801#]). Three beeps are heard and the STAY and AWAY indicators flash.
2. Enter the User Code number (1 to 32), followed by the [#] button (for example, [2#] = User 2, [8#] = User 8). Two beeps are heard and the selected user number displays on the keypad indicators.
3. Enter the digits required for the new code followed by the [#] button (for example, for User Code 5768, enter [5768#]). Two beeps are heard and the STAY and AWAY indicators turn off.

To add or change other User Codes, repeat this procedure as many times as required.

Deleting User Codes

Only the Master Code holder can delete other system user codes.

How to Delete a User Code

1. Enter your Master Code, followed by [1] and the [#] button (for example, [25801#]). Three beeps sound and the STAY and AWAY indicators flash.
 2. Enter the user code number (1 to 32), followed by the [#] button (for example, [2#] = User 2, [16#] = User 16). Two beeps sound and the selected user number displays on the keypad indicators.
 3. Press the [*] button to delete the selected User Code. Two beeps are heard and the STAY and AWAY indicators turn off.
- To delete other User Codes, repeat this procedure as many times as required.



Should you require any further information please refer to your alarm manual or our website: www.crimewatch.com.au

CRIMEWATCH

SECURITY

3. Press the [#] button to exit and return to the disarmed state. Two beeps sound, and the STAY and AWAY indicators turn off. If a long beep sounds, an error was made when entering the date and time.

Arming in AWAY Mode

When you leave your premises and require all zones to be in a ready state to detect intrusion, arm the system in AWAY Mode.

There are two different methods for arming the system in AWAY Mode. Method one is standard and always operates. Method two is optional and can be disabled by your installer if you do not want to use single button arming.

Method One Enter your user code followed by the [#] button (for example, [2580#]).

Two beeps sound and the AWAY indicator displays. Exit Time starts counting.

Method Two Hold down the [#] button until two beeps sound.

The AWAY indicator displays and Exit Time starts counting.

Arming in STAY Mode 1

STAY Mode 1 is only used when the perimeter and unused areas of the premises need to be armed to detect an intruder from entering the premises. At the same time, you can move freely within an area that is automatically isolated.

Only your security company can program zones automatically isolated in STAY Mode 1.

There are two different methods for arming the system in STAY Mode 1. Method one is standard and always operates. Method two is optional and may be disabled by your installer if you do not want to use single button arming.

Should you require any further information please refer to your alarm manual or our website: www.crimewatch.com.au