

## Bosch 3000

### TOUCH SCREEN USER GUIDE- DEFAULT USER CODE: 2580

#### Step 1:

Unscrew Alarm Panel LID & Plug in the battery.

Red Plug to Red Terminal, Black Plug to Black Terminal (refer picture Below).



Close alarm panel, ensure power point is turned on and proceed to follow steps below on your keypad

#### Time & Date:

- Press 'Settings' then 'Time & Date' followed by your master user code
- From this menu you will need to set the current Time & Date followed by 'Enter'.
- Once complete, press the back button two times to return to the home screen.

#### Adding/Changing User Codes:

- Press 'Settings' then 'Users' followed by your master user code
- Select 'Pin' of the user you would like to alter then press # (Enter >) to save.
- Once complete, press the back button two times to return to the home screen.

#### Arming your system:

Press the 'ARM' button located on your home screen enter your code, this will start the exit delay.

#### Disarming your system:

Press on the red armed icon on your display, then type your code followed by the 'Enter' button.

#### Stay arming your system:

Press the button labelled 'A1' located on your home screen, press stay followed by your user code and this will start the stay mode exit delay.

#### Disarming stay mode on your system:

Press on the armed icon on your display, then type your code followed by the 'Enter' button.

Should you require any further information please refer to your alarm manual or our website: [www.crimewatch.com.au](http://www.crimewatch.com.au)